KitchenAid®

COOKTOP PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

30" ELECTRONIC RANGE
FREESTANDING
DESIGNER STYLE
SELF−CLEAN OVEN
CERAMIC COOKTOP

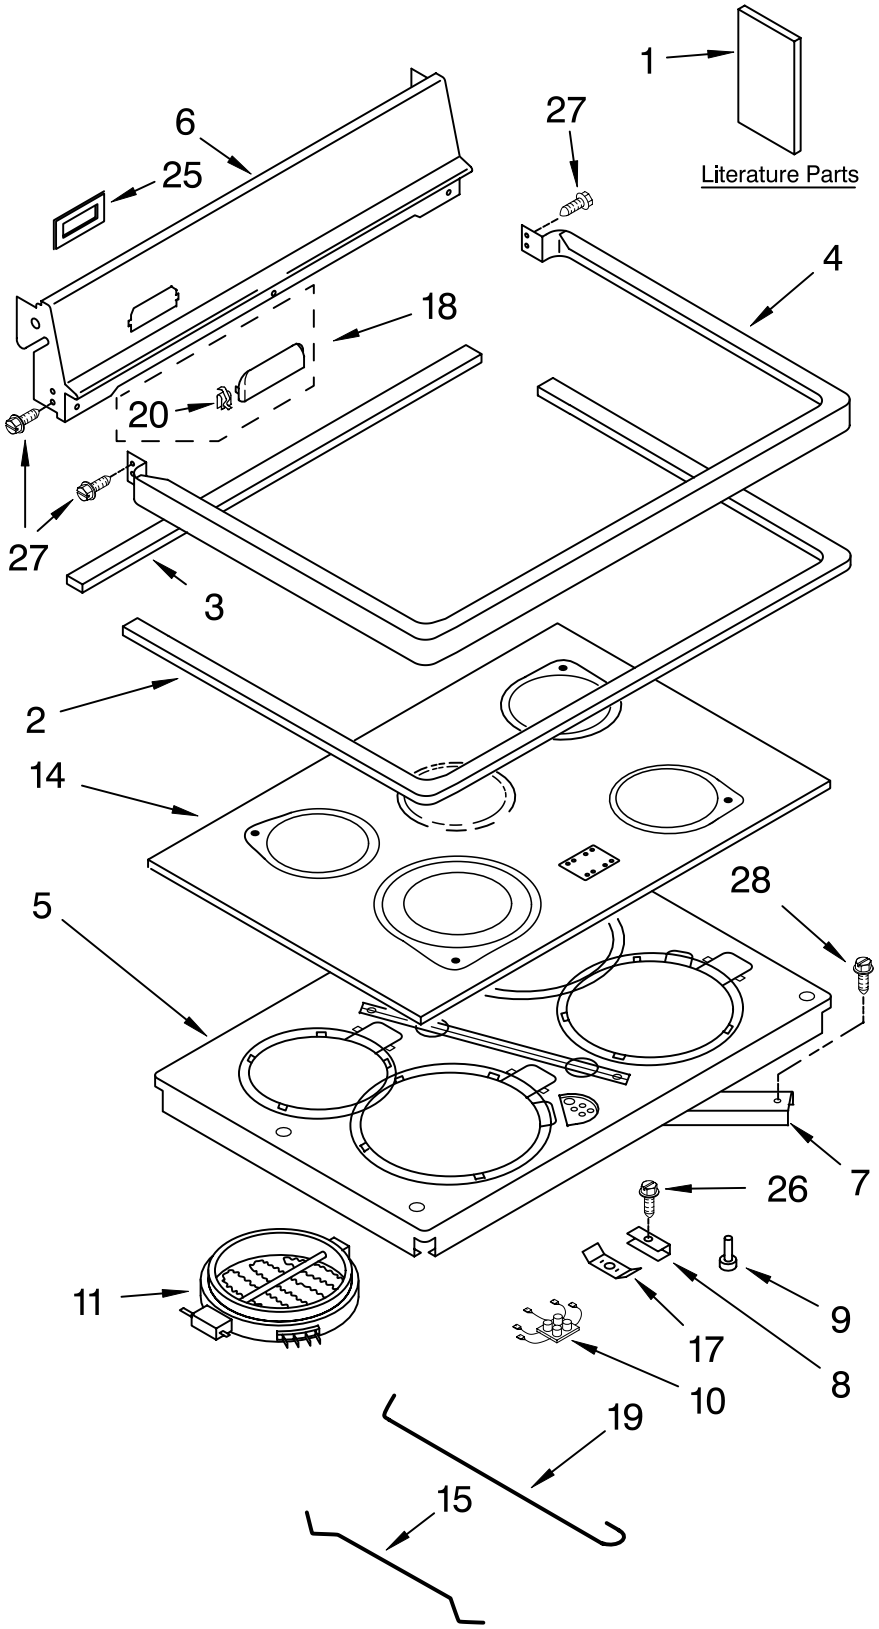

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
		Use & Care Guide
	LIT9753843	English
	LIT9753843F	French
	LIT9782240	Wiring Diagram
	LIT3191638	Safer Cooking Tips
	LIT9752777	Installation Instructions
	LIT9752776	Template, Anti−Tip Smart & Easy Guide
	LIT4449264	English
	LIT4448687	French
2		Gasket, Cooktop
	9780939	Front & Sides
3	9781614	Rear Gasket
4		Frame, Cooktop
	9750456PW	White
	9750456PB	Black
	9750456PC	Biscuit
5	9753674	Support, Element
6		Back Splash
	9752337GW	White
	9752337GB	Black
	9752337GC	Biscuit
7	9753675	Brace, Support
8	9753691	Support Clips (4)
9	9750969	Bumper (4)
10	9781935	Hot Light
11		Element, Surface
	8272564	1500W − LR
	8272563	1000/2400W − LF
	9754274	Warm Zone
	8272566	1800W − RR−RF
14		Cooktop, Ceran
	9753710CW	White
	9753710CB	Black
	9753710CT	Biscuit
15	9781460	Rod, Small Ceran Element
17	9781235	Screw, Anchor
18		Cover, Vent
	9753040CW	White
	9753040CB	Black
	9753040CC	Biscuit
19	9781459	Rod, Large Ceran Element
20	3149190	Clip, Mounting
25	9750767	Gasket
26	423248	Screw, 10−16 X 3/4
27	3149333	Screw, 10−16 x 1/2
28	9780272	Screw, 10−16 x 1/2
	9753677	Spring, Warm Zone

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

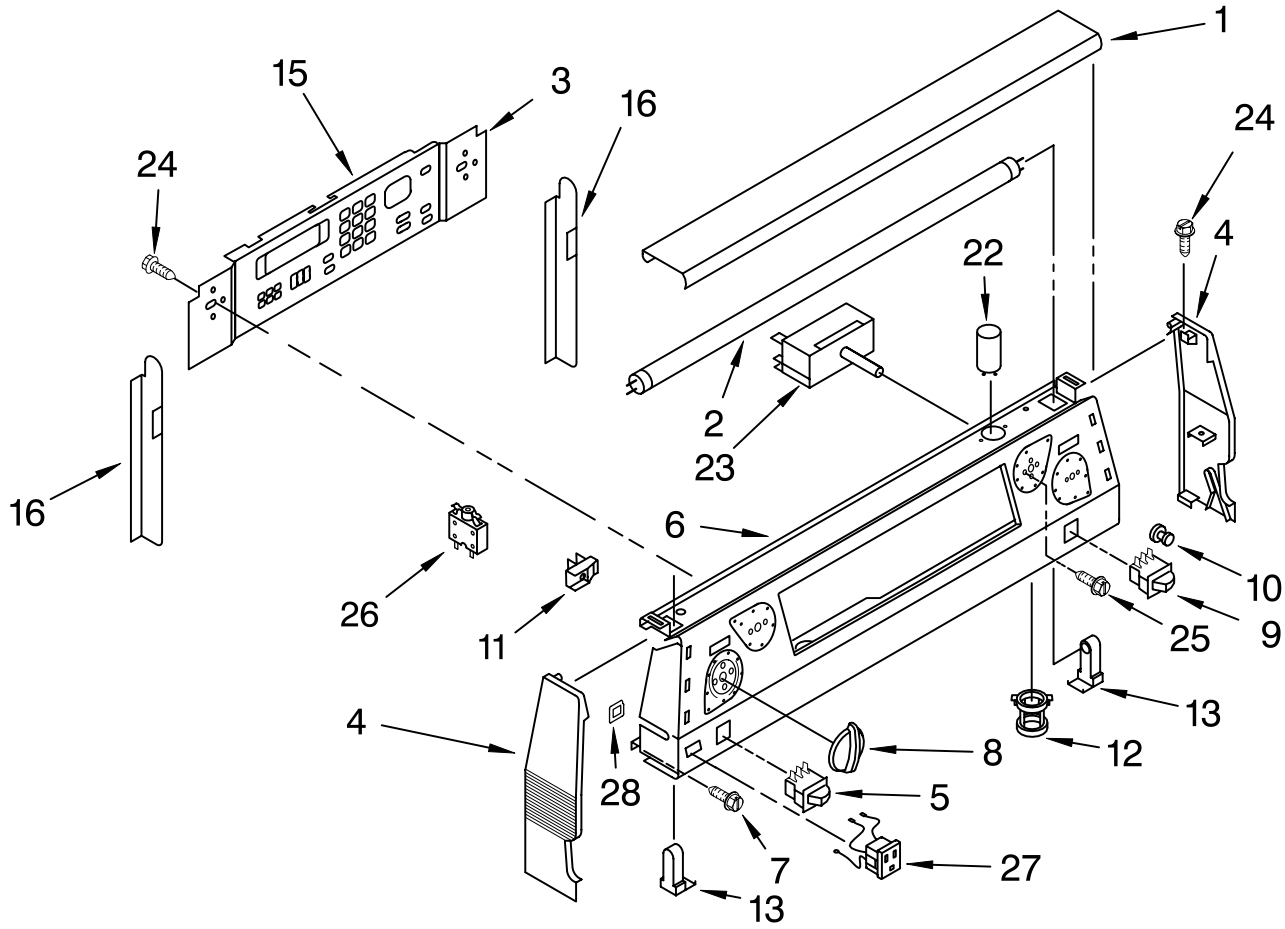

Illus. No.	Part No.	DESCRIPTION
1		Lamp Cover
	9753156PW	White
	9753156PB	Black
	9753156PC	Biscuit
	9750995	Insulation, Control
2	422581	Light, Fluorescent
3	9780655	Bracket, Timer
4		End Cap (Right Hand)
	9750367FW	White
	9750367FG	Black
	9750367FC	Biscuit
		(Left Hand)
	9750366FW	White
	9750366FG	Black
	9750366FC	Biscuit
5		Switch, Rocker (Warm Zone)
	9753692FW	White
	9753692FB	Black
	9753692FC	Biscuit

Illus. No.	Part No.	DESCRIPTION
6		Panel, Control
	9753730PW	White
	9753730PB	Black
	9753730PC	Biscuit
	9753730PS	Black Stainless
7	9780852	Screw, 8−18 x 3/8
8		Knobs, Control (4)
	9750372FW	White
	9750372FF	Black
	9750372FC	Biscuit
9		Switch, Rocker
	9753261FW	White
	9753261FB	Black
	9753261FC	Biscuit
10	9752589	Indicator Lens
11	9753422	Light, Indicator
12	9750866	Starter Holder
13	9782259	Receptacle, Light

Illus. No.	Part No.	DESCRIPTION
15		Oven Control Assembly
	9782244CW	White
	9782244CB	Black
	9782244CC	Biscuit
16	9780655	Brace, Control Pnl
22	9781118	Starter, Lamp
23		Switch, Infinite
	9750638	1500W − RR
	9750639	1800W − RF−LR
	9755173	1000/2400W − LF
	9754008	Insulation, Control
24	9780265	Screw, 10−16 x 3/8
25	3400816	Screw, 8−32 x 7/32
26	3191072	Breaker, 15Amp
27		Outlet, Untimed
	9751480FW	White
	9751480FB	Black
	9751480FC	Biscuit
28	9751046	Support, Outlet

DOOR AND DRAWER PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

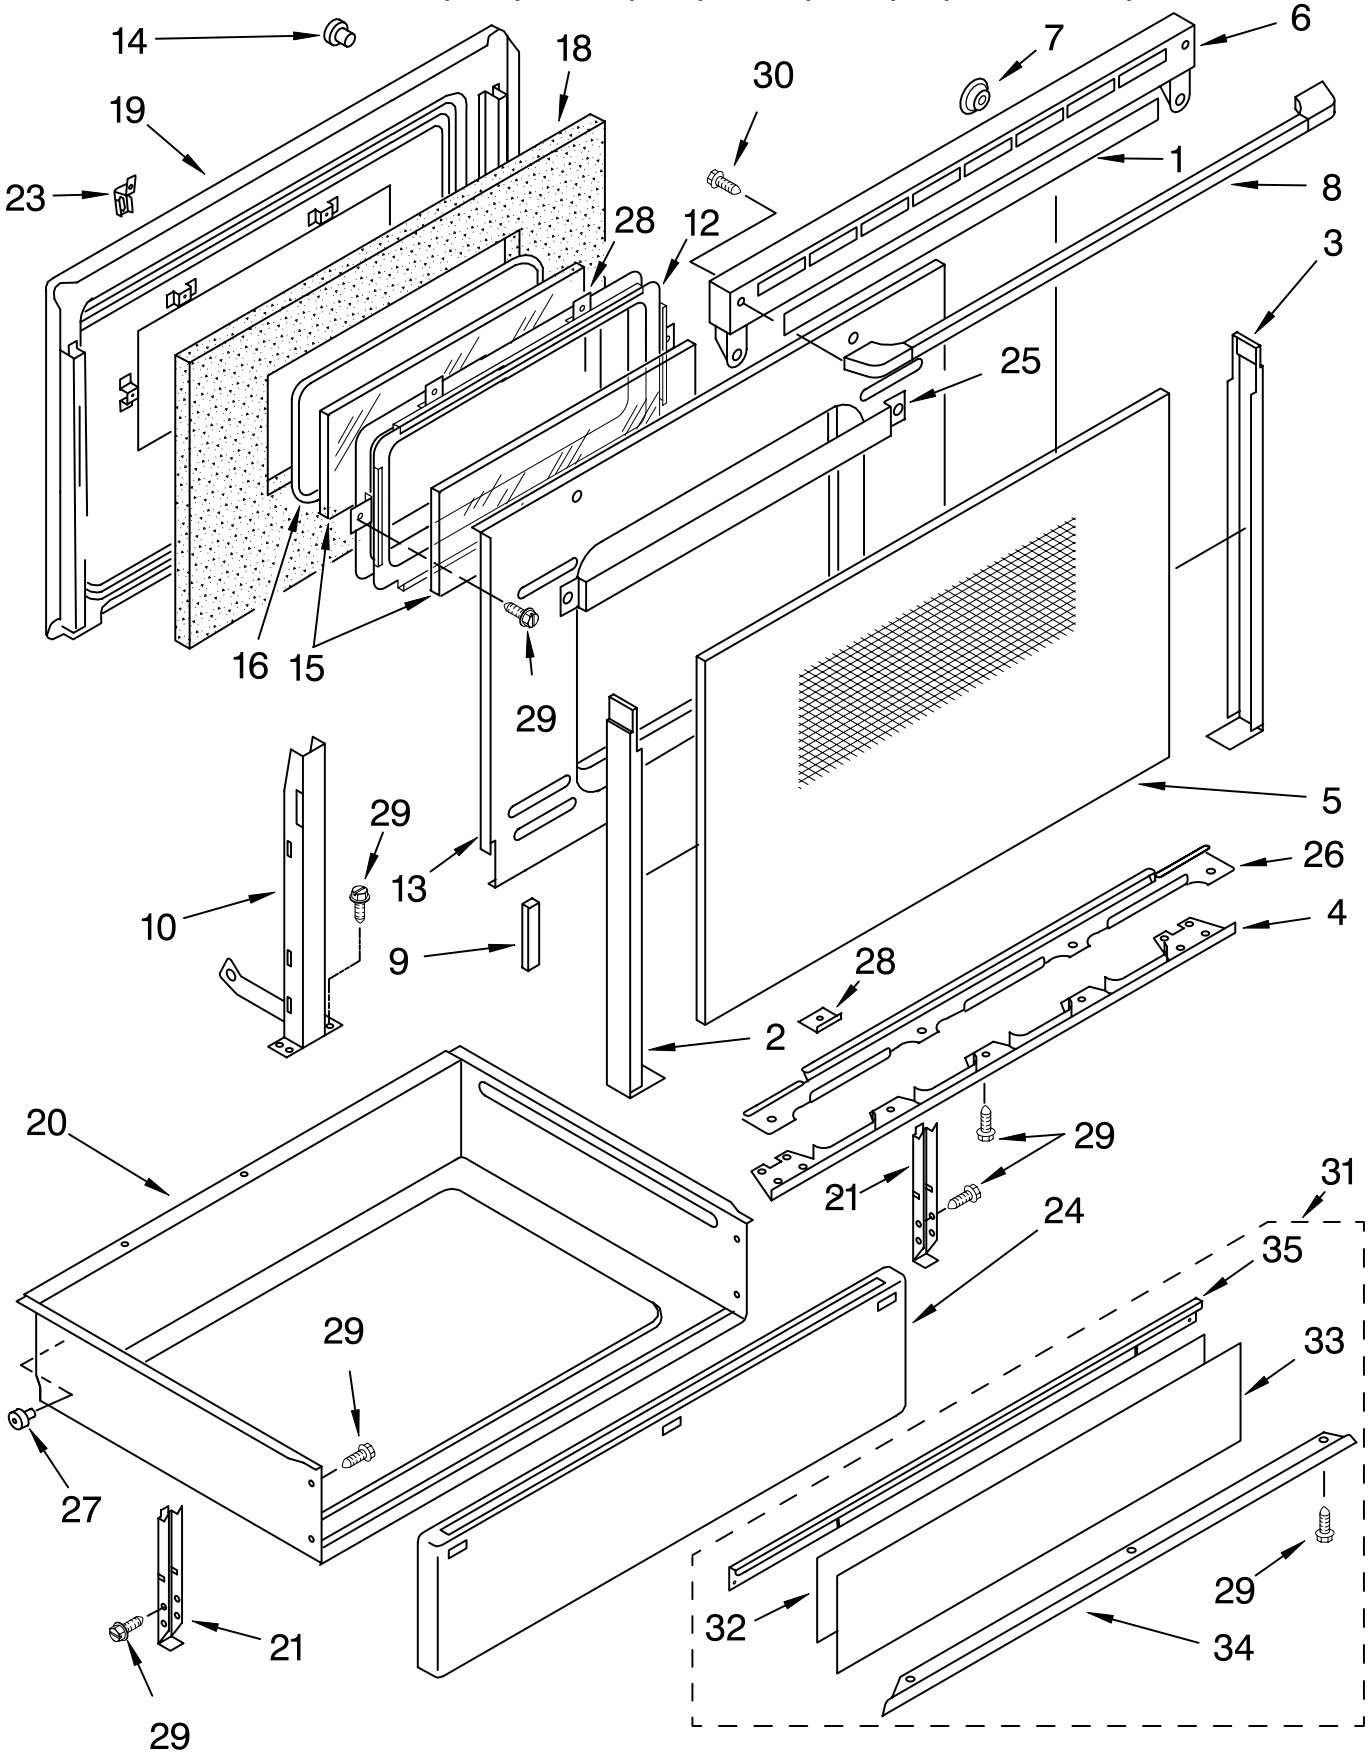

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9781659	Gasket, Glass
2		Trim, Door−Left
	9782003PW	White
	9782003PB	Black
	9782003PC	Biscuit
3		Trim, Door−Right
	9782004PW	White
	9782004PB	Black
	9782004PC	Biscuit
4		Trim, Door Bottom
	9781209PW	White
	9781209PB	Black
	9781209PC	Biscuit
5		Glass, Door
	9781627PW	White
	9781627PB	Black
	9781627PC	Biscuit
	9754041	Black Stainless
6		Vent, Door
	9753498GW	White
	9753498GB	Black
	9753498GC	Biscuit
7	9781502	Spacer, Door
8		Handle, Door
	9780523PW	White
	9780523PB	Black
	9780523PC	Biscuit
9	9781449	Gasket, Door Glass
10	9782033	Hinge, Door R or L
12	9781602	Frame, Window
13	9781586	Shield Door
14	9780771	Bumper, Rubber
15	9781593	Glass, Door (2)
16	9755177	Seal, Window
18	9754006	Insulation
19	9781600GM	Liner, Door
20		Drawer & Roller
	9780583	White, Black & Biscuit Models
	9780583	Black Stainless Model
21	9750169	Bracket, Drawer
23	9750676	Retainer,Door
24		Front, Drawer
	9782108PW	White
	9782108PB	Black
	9782108PC	Biscuit
	9782109PB	Black Stainless
	90296	Clip
25	9750693	Channel, Heat
26	9781771	Steam Deflector
27	423713	Roller, Support(2)
28	9781502	Retainer, Glass
29	9780265	Screw, 10−16 x 3/8
30	9781072	Screw, 10−24 x 3/8
31		Black Stainless Only
32	9753329	Cushion, Insert
33	9754062	Insert, Stainless
34	9750613PB	Trim, Glass Bottom
35	9750614PB	Trim, Glass Top

OVEN CHASSIS PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

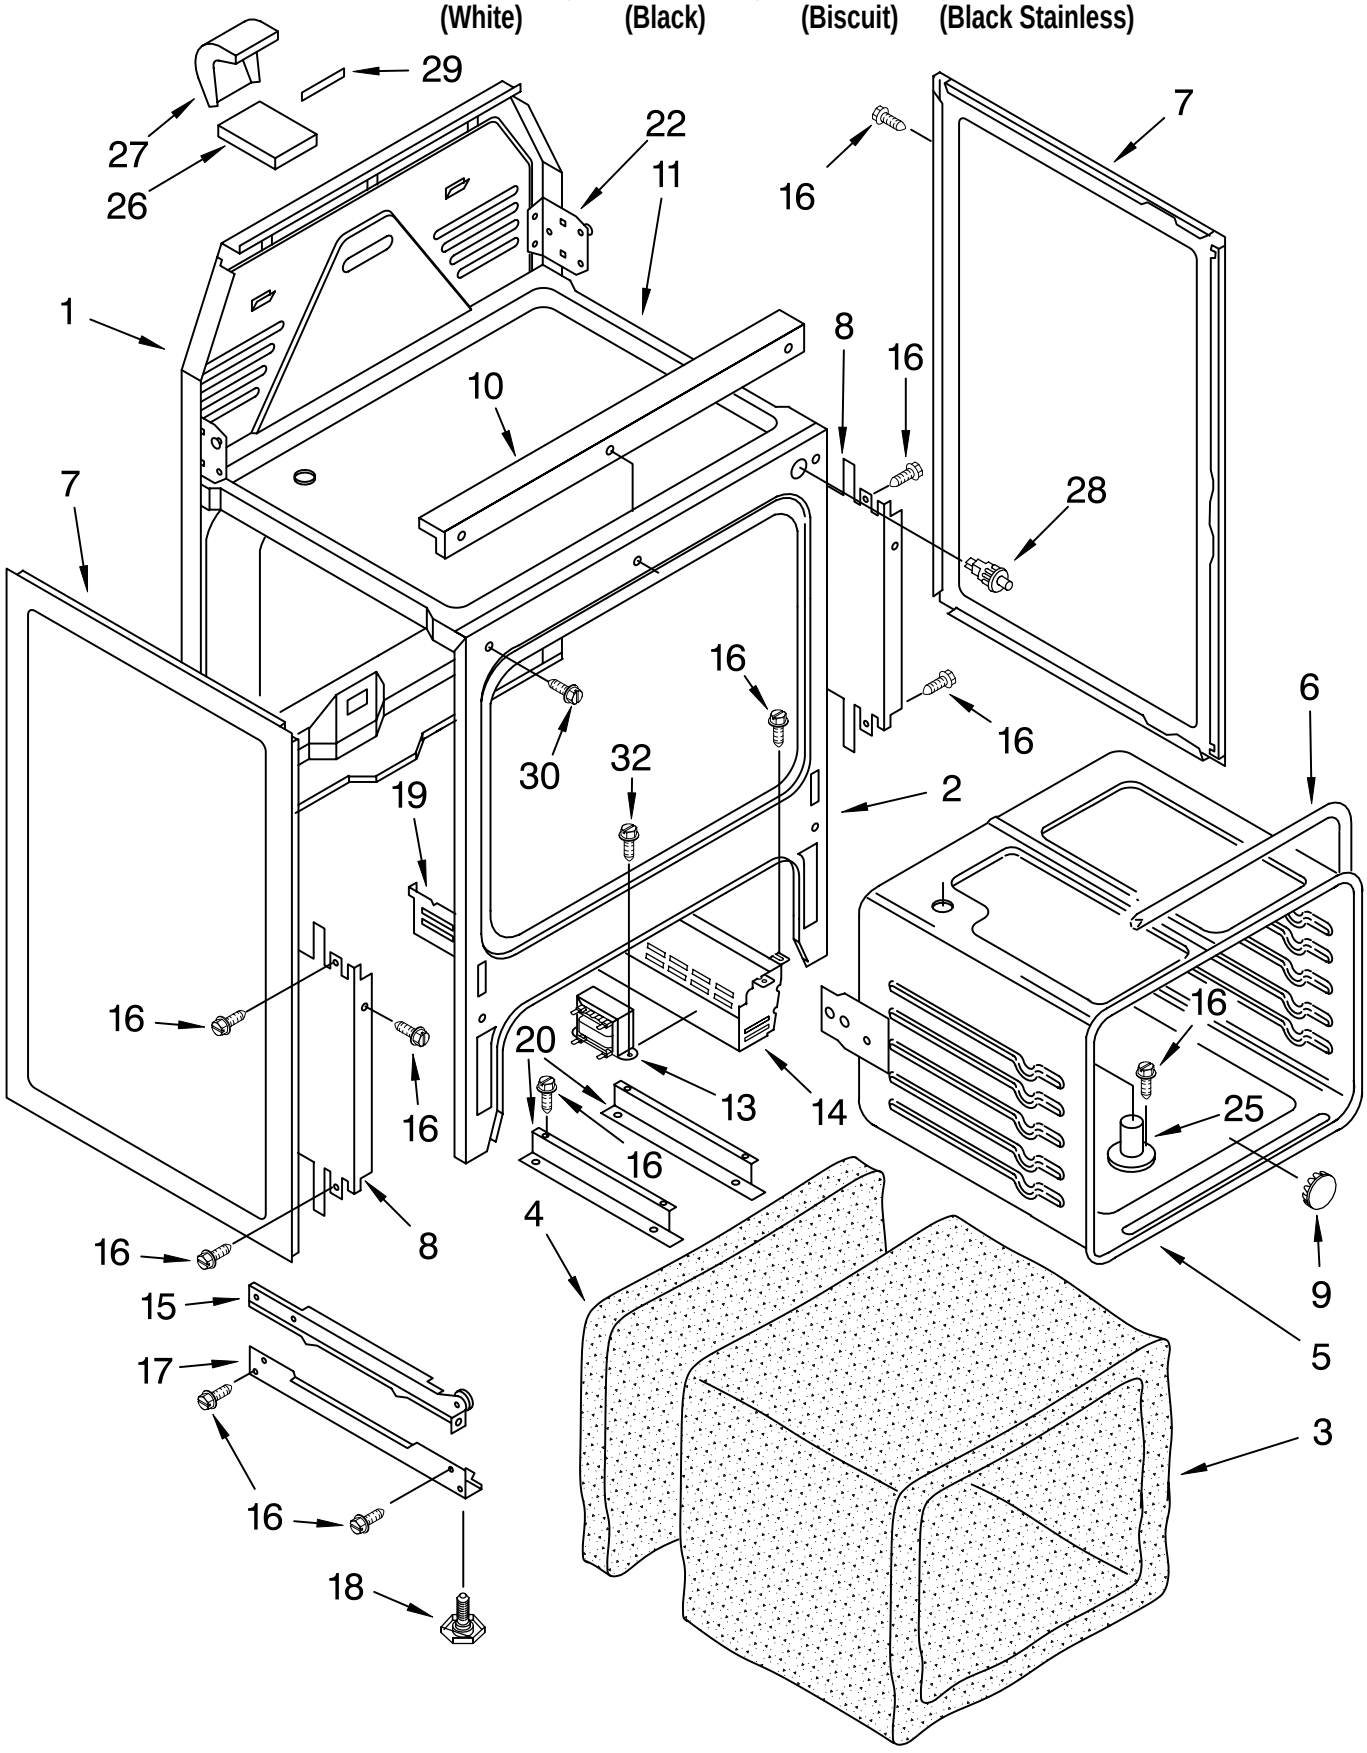

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION
1	9750146	Main Chassis, Back
2	9750514GM	Chassis, Front
3	9754003	Insulation, Wrap
4	9754011	Insulation, Rear
5	9753744GM	Oven Liner
6	9755179	Gasket Oven
7		Oven, Side L or R
	9781907PW	White
	9781907PB	Black
	9781907PC	Biscuit
8	9780664	Shield, Insulation
9	9780578	Button, Plug
10	9780585	Wire Guard
11	9750478	Burner Box
13	4451891	Transformer, Light
14	9751060	Support, Fan
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
16	9780265	Screw, 10−16 x 3/8
17	9750147	Bottom Rail (2)
18	312701	Foot, (4)
19	9782005	Hinge, Base L or R
20	9781904	Support Rail, Pan
22	9750258	Hinge, Cktp.−Left
	9750416	Hinge, Cktp.−Right
25	9753091	Vent Tube
26	9750393	Cover, Vent
27	9750394	Back, Vent
28	9781581	Switch, Door−Light
29	9750767	Vent Gasket
30	9780275	Screw, 8−18 x 3/8
32	9780269	Screw, 8−32 x 3/8

OVEN PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

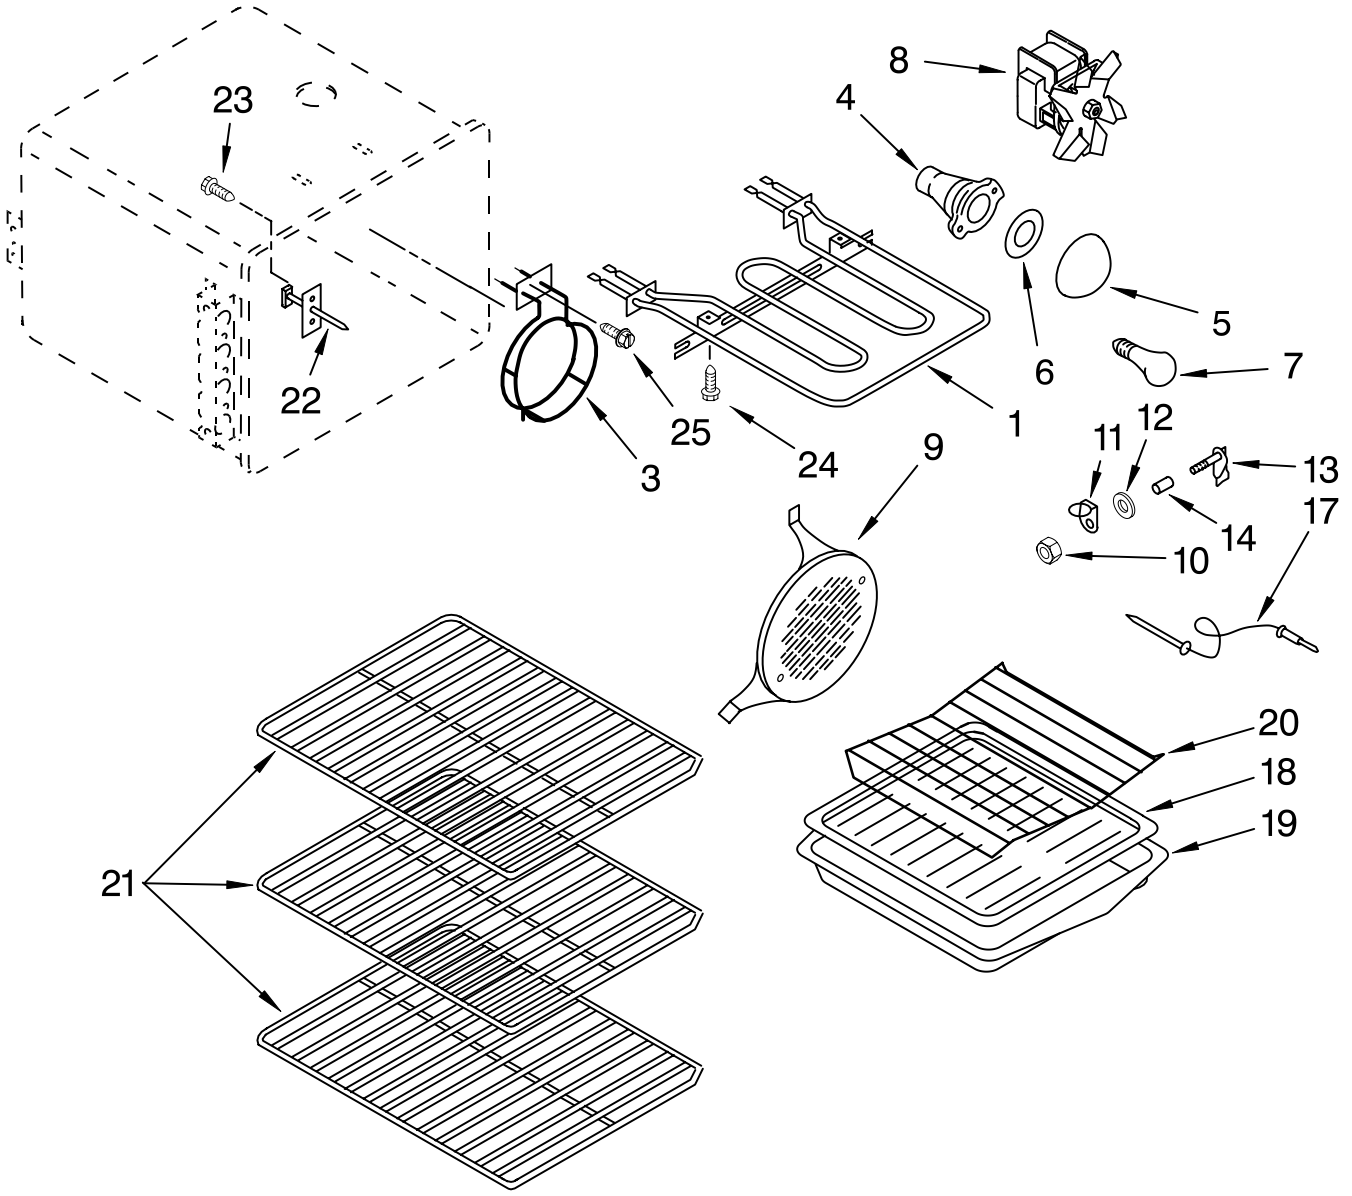

Illus. No.	Part No.	DESCRIPTION
1	9750967	Element, Broil
3	9751447	Element, Convection
4	9781050	Socket, Light
5	9781049	Lens, Light
6	3184533	Gasket, Lens
7	8935	Bulb, Light
8	9781543	Assembly, Fan
9	9751904GM	Baffle, Convection
10	4167277	Lock−Nut, Cvr.Jack
11	4167266	Jack Cover
12	305289	Gasket
13	4173575	Receptacle, Probe
14	3179672	Spacer, Tubing
17	3150144	Probe
18	420104GM	Grill, Broiler
19	420101GM	Pan, Broiler
20	9750827	Rack, Roasting
21	9750823	Rack, Standard
22	9782081	Sensor
23	9780269	Screw, 8−32 x 3/8
24	340184	Screw, 10−16 x 1.5
25	9781509	Screw, 8−32 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

REAR CHASSIS PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

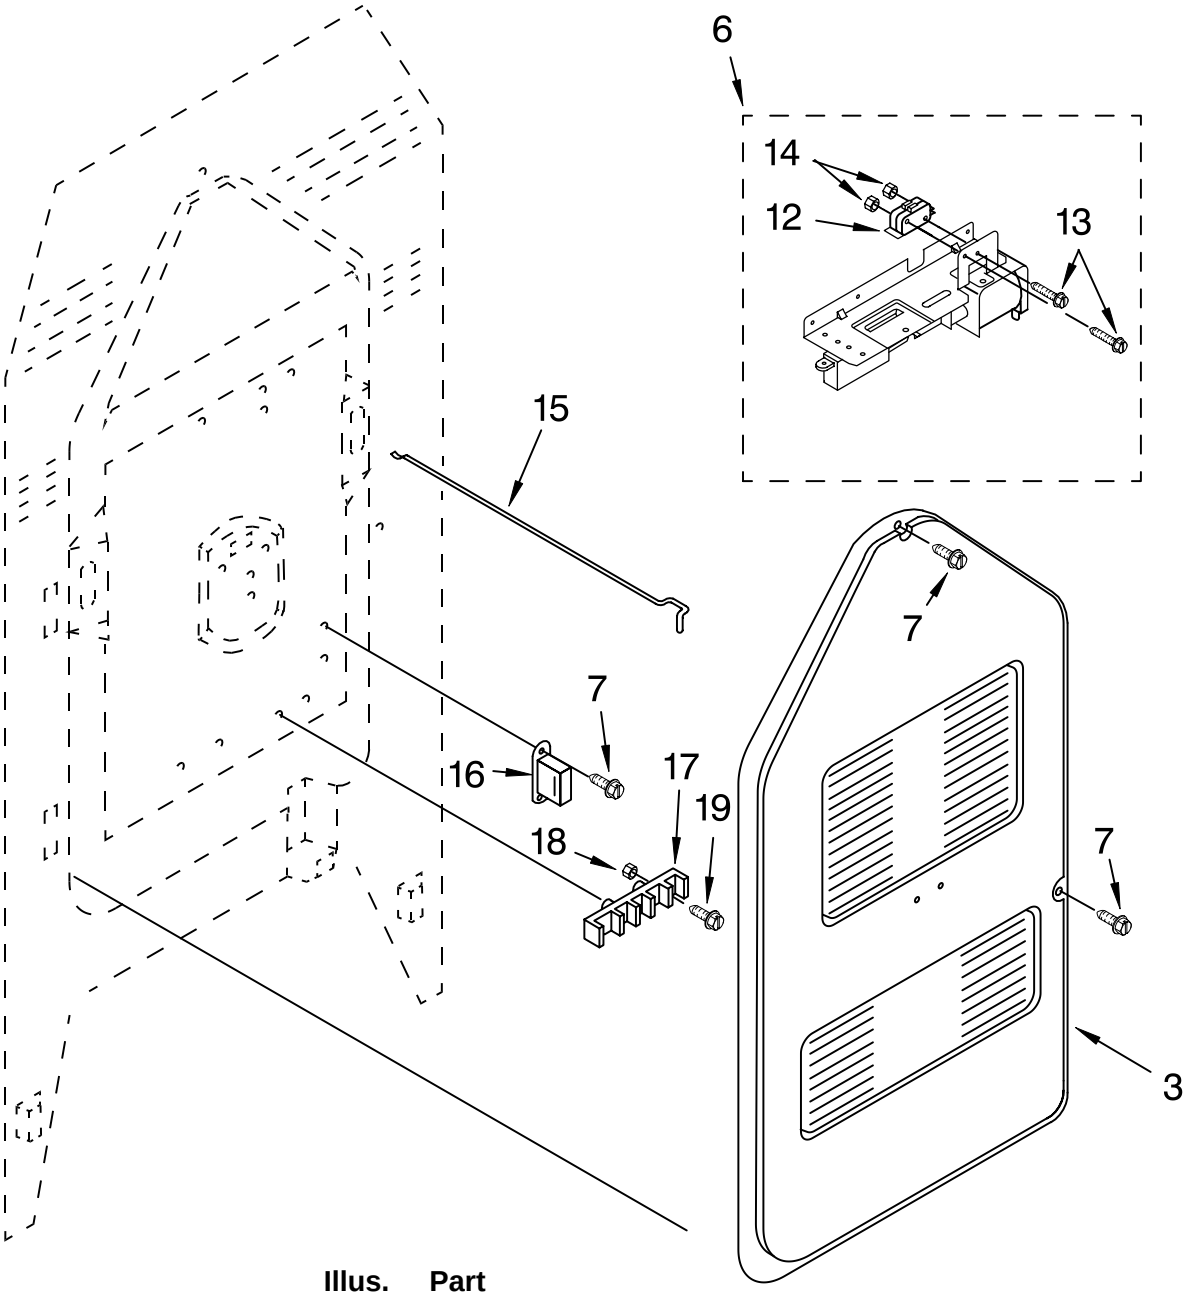

Illus. No.	Part No.	DESCRIPTION
3	9750150	Rear Panel
6	9782257	Oven Lock Assembly
7	9780265	Screw, 10−16 x 3/8
12	9782117	Switch, Interlock
13	9750887	Screw, 4−40 x 1
14	9750888	Nut (2)
15	9750523	Rod, Lock
16	9780881	Ballast, Lamp
17	258076	Terminal Block
18	112432	Nut,Terminal Block
19	98884	Screw, 10−16 x 1

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

HIDDEN BAKE PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

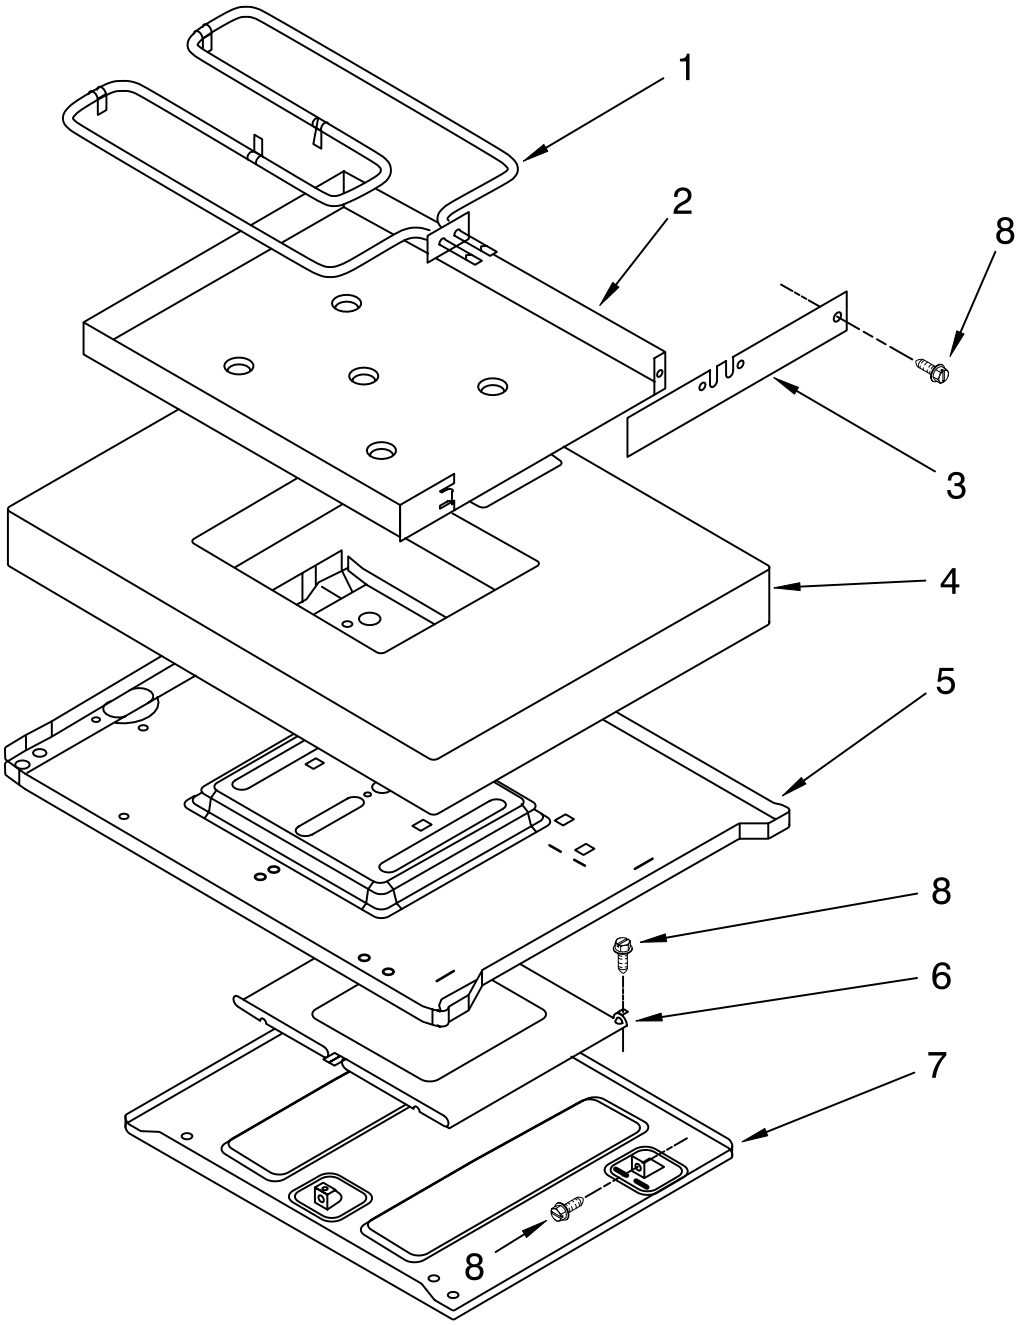

Illus. No.	Part No.	DESCRIPTION
1	9752294	Element, Bake
2	9782048	Pan, Hidden Bake
3	9782049	Cover, Hidden Bake
4	9754005	Insulation
5	9752735	Reatiner, Insulation
6	9782050	Plate, Reflector
7	9782051	Shield
8	9780265	Screw, 10−16 x 3/8

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

MISCELLANEOUS PARTS

For Models:YKERC507HW4, YKERC507HB4, YKERC507HT4, YKERC507HS4
(White) (Black) (Biscuit) (Black Stainless)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
511873	White Porcelain (2 Oz.)
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
285006	Superior Black
206922	Primer (White)
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
4392900	Biscuit

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)
261582	Grease
9780196	Cleaning Creme

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25')

WIRING HARNESS PARTS

9753683	Harness, Wire (Hidden Bake)
9782140	Harness, Wire (Cooktop Control)
9753682	Harness, Wire (Dual Ceran)
9781930	Harness, Wire (Single Ceran)
9753680	Harness, Wire (KWZ)
9750376	Harness, Wire (Oven Door)
9782120	Harness, Wire (EDC/Jabil)
9753921	Harness, Wire (Transformer)
9782080	Harness, Wire (Meat Probe)
9752365	Jumper, 5 Term.
20082084	Wire Tie
9753687	Harness, Wire (Simmer)
9752772	Harness, Wire (Top Light)
9781291	Harness, Wire (Outlet)
9781287	Power Cord
9750984	Cable Hanger

ANTI−TIP KIT

9751745	Anti−Tip Kit